


AROMABAT1  
INTELLIGENT SCENT MACHINE  
**USER MANUAL**




Please read the manual carefully before use and keep it properly

Please read carefully before use and keep it properly.  
We supply warranty within 12 months after purchase date for all qualified machines.

 
**Operation**

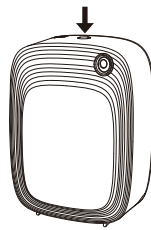

 
① Press the top button  
Open the cover.

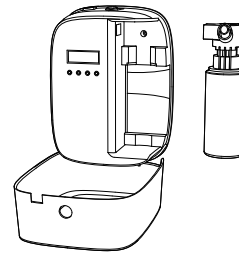

 ② Pull out the atomizer head and  
essential oil bottle as a whole.

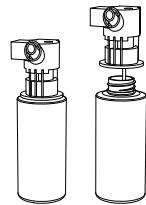

 ③ Take out the essential oil bottle,  
add essential oil and put it back on  
the atomizer head.

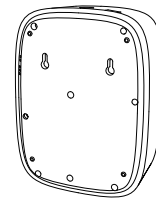

④ Put the atomizing head back  
into the device and close the cover.

Wall-mounted: First fix the wall-mounted backplane to the wall, and then hang the device on the backplane hole along the screw position.

**Packing**

 
Smart fragrance equipment x1, power cord x1, bottle x1, spare atomizing core x1, wall-mounted back plate x1, instruction manual x1

**Function Keys**

① Indicator light: When the device is working, the indicator light is displayed as green, and when it stops working, it is displayed as red light.

② WIFI indicator: it will keep flashing when it is not equipped with Internet, and it will stop flashing when it is equipped with Internet (AP mode is the same)

(Note: WIFI version devices only have this function)

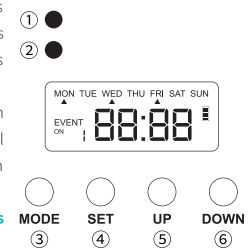

③ MODE: Adjust different function, including your local current time, 5 different groups working periods, Work/Pause interval time, aroma concentration. Press [MODE] for 10 seconds to reset the factory settings and wifi mode.

④ SET: Start program Setting by flexible setting including the Time, Date, aroma concentration. Then, press [SET] for 10 seconds to lock / unlock the previous setting.

⑤ UP: Press it to adjust/increase the function, such as adjust the time, aroma concentration, working days. Press up for 10 seconds to turn on AP mode.

⑥ DOWN: Press it to adjust/increase the function, such as adjust the time, aroma concentration, working days. Press up for 10 seconds to turn on AP mode.

**Set the system time**

Firstly to press [SET], the LCD display showed "hours" figure will flash, then press [UP/DOWN] to adjust hour. Press [SET] at second time. Hour adjustment finished. The minutes figure will flash, then press [UP/DOWN] to adjust the minutes. Press [SET] at the third time, Minutes adjustment finished. The indicated date will flash, press [UP/DOWN] to adjust the current date, finally press [SET] at fourth time, all function setting finished.

**Set the working periods**

**A** Press the [MODE] key for the first time, the LCD display shows the factory-set time, and the machine can set 5 working time periods. Example: Set 08:00-10:00, 11:00-12:00, and 13:00-14:00. Over 00:00, just set two time periods, such as the first time period 08:00-23:59, the second time period 00:01-06:00.

**B** first time to press [SET] key for the first time to enter the working clock setting for the first period of time, the hour start period number flashes, press the [UP/DOWN] key to adjust the hour start time; press the [SET] key the second time, the hour start period After setting, the number of minute start period will flash, press [UP/DOWN] key to adjust the start period of minutes; press the [SET] key for the third time, the minute start period is set, the group number flashes when the week matches, single press [UP] The key displays the symbol ▲ on the LCD screen to select the working weekday, and then press again to not display that means it is not selected, and then press [DOWN] to continue setting other weekday combinations.

**C** Second time to press [MODE], the LCD display will show [EVENT 1 OFF] means the PAUSE TIME of first group. Then, press [SET] to do the program setting. Press [UP/DOWN] to adjust hours, minutes.

**D** Third time to press the [MODE] key for the third time to set the device density. Press [UP/DOWN] key to adjust the density, select the appropriate density, and adjust for 5s each time, the maximum value is 300s, and the minimum value is 5s.

**Notice:**

- ① While setting working time, the off time cannot be earlier than on time.
- ② It need to set two separate run groups if run time across the 00:00.

**Equipment Maintenance**

If the equipment is not used for a long time, 95% industrial alcohol should be added into the refined oil bottle to clean the nozzle and other parts inside the equipment. Tip: Maintain the equipment with 95% industrial alcohol at least every 1-2 months.

 
Specific operation: add 95% industrial alcohol into the empty bottle, turn on the equipment and run for 10-15 minutes after, then turn off the equipment and pour the alcohol, then screw back the bottle to machine.

**Product Parameter**

Size: W144* D69* H182mm	Weight: 0.69kg
Voltage: DC1.5/5V	Capacity: 150ml
Power: 5W/USB 8W	Coverage: 100-300m3

**Change the Atomization Core**

The atomization head include: oil bottle, oil suction pipe, filter, atomizing core. Take down the oil bottle, remove the atomizing core and pull out the suction pipe, then change the new atomizing core and the suction pipe.

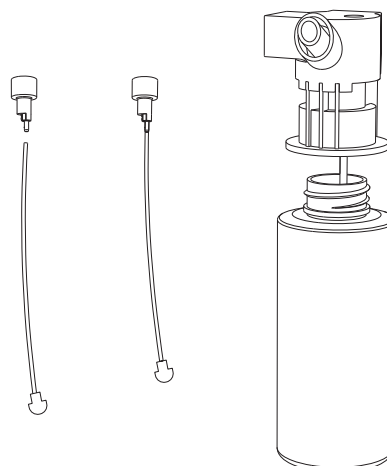

**Warranty**

- ① The machine is not for sale but not resell or second hand.
- ② Warranty is offered for all qualified machines. During warranty, we will offer repair services and the free parts but without essential oil.
- ③ The warranty card & purchase Invoice are needed if after service required. Please contact with us within warranty if any problems.
- ④ The following is not for free warranty service:
  - ① Damage & problems caused by Accidents & Fire.
  - ② Not use properly and wrong operation.
  - ③ If repaired by not professional person and make some parts damaged.
  - ④ Damaged during transportation.
  - ⑤ Without our warranty card.
  - ⑥ Without proper cleaning for a long time
  - ⑦ The machine work time out.
  - ⑧ Machines & Parts not from us.
  - ⑨ Machines not gotten from official channels.
  - ⑩ Send the machines back without permit from manufacturer.

**Notice**

- 1. Please carefully read the Instruction before installation, and keep the User manual to check if need at anytime
- 2. Please make sure the machine upright, no leaking and no down; or may damage the device and parts
- 3. Please do not use the broken power wire and make sure the power supply is suitable for the machine, or may cause fire.
- 4. Please do not open the machine by yourself, If problems, please contact us promptly!